

# 12 H CCA User Manual

What is included in the attachment?



How to Assemble Grinder Attachment:

Lift the auger and insert it into the chamber head. Pick the knife and grinder plate and slide them into the chamber head one by one. When the parts are secured inside, get the retainer ring and spin it onto the chamber head clockwise to tighten. Lift the food pan and insert it onto the chamber head's top. The grinder attachment is now ready to be loaded to the power source equipment.





### How to Load Grinder Attachment onto #12/#22 head Power Equipment:

Before mounting the unit, make sure that the power source equipment is turned off. Carefully lift the assembled unit and insert the square milled shaft end into the hub while turning the unit to engage the square end on the shaft with the square hole in the adapter. Slide the unit forward and push the unit fully forward on to the hub. Tighten the thumbscrew to secure the unit to the hub. The grinder attachment is now ready to process product.



### How to Operate:

Connect the electrical supply to the power source equipment, turn the power source equipment on. Lift the stomper and drop the meat into the feed hopper in food pan. Keep hands and fingers out of the hopper. With the feed plate, gently use the stomper to push the product into the rotating plate unit.

### How to Dismount and Disassembly for Cleaning and Maintenance:

**DISMOUNTING:** Make sure that the power source equipment is turned off and its electrical supply is disconnected or locked out. Loosen the thumbscrew and slide the unit from the hub. Set the unit on a stable working surface.

**DISASSEMBLY:** To disassemble the grinder attachment for cleaning or maintenance

- Remove the food pan from the top.
- Spin the retainer ring counter-clockwise to disassemble from the chamber head.
- Remove the plate, knife and auger one by one.

### **CLEANING:**

Wearing hand protection, wash all components by hand with a mild soap and water solution. Use a long handled scrub brush on all plate units to avoid cutting fingers. Do not rest knives, plates, auger or retaining ring on any surface that will mar. Dry component parts with a soft cloth. For the best and most sanitary product, clean the unit immediately after use or before switching food products.

### Troubleshooting:

**CAUTION:** Review all safety notes and disconnect the electrical power supply to the power source equipment before attempting corrective measures.

<b>Trouble</b>	<b>Possible Cause</b>	<b>Solution</b>
Attachment cannot be installed into mixer hub	Hub's shaft is in let-in position	Rotate mixer's shaft slowly until insert could be done
Mounted unit rattles when under power.	Thumbscrew or securing mechanism missing or loose.	Tighten or replace thumbscrew.
Auger scrapes inside the chamber head.	Auger is not positioned well.	Adjust position and add oil onto the auger surface.