

Front Trigger Water Gun Repair

MV-2522 Series

1. Disconnect water gun from hose/water source.
2. Adjust flow screw, counter-clockwise, until screw disengages from stem assembly.
3. Remove threaded spray diffuser.
4. Remove stem assembly.
5. Apply lubricant to o-rings of new stem assembly.
6. Insert new stem assembly into water gun body aligning slot in stem with notch in the bore of the water gun body.
7. Engage threads of flow screw to the stem assembly until threads bottom out.
8. Replace o-ring on threaded spray diffuser.
9. Securely fasten threaded spray diffuser to water gun body.
10. Re-adjust flow screw until cartridge stem extends approximately halfway into threaded spray diffuser.
11. Connect water gun to hose/water source and make any necessary flow adjustments.

